
REAL-EL

USER MANUAL

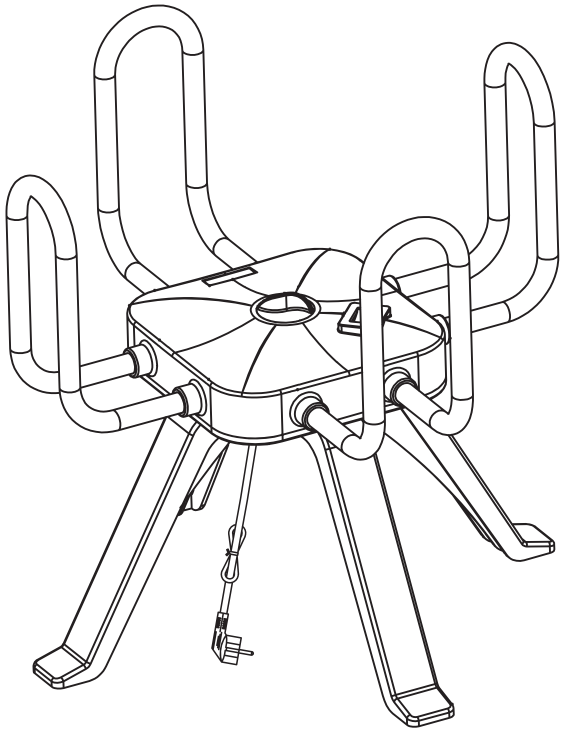

ELECTRIC SHOES DRYER

W–2050

Congratulations on your purchase of TM REAL-EL products!


COPYRIGHT
© 2026 ENEL GROUP OU.
This Manual and information contained in are copyrighted. All rights reserved.

TRADEMARKS
All trademarks are the property of their legal holders.

PACKAGE CONTENTS
- Electric Shoes Dryer – 1 pc
- Stand base – 1 pc
- Connector – 1 pc
- User manual – 1 pc
- Warranty card – 1 pc

SPECIAL FEATURES
- Quiet & Safety
- Intelligent Thermostat
- Energy-saving
- ON/OFF switch

SAFETY AND CAUTIONS
- Hang the shoes on the shoes rack properly.
- Stop using when the product cover or heating tube damaged.
- Connect the plug to mains with earthing only to avoid the risk of electric shock.
- Start power only after the product is clean and installation finished properly.
- Do not operate this appliance with a damaged cord, plug, or after the appliance malfunctions or has been damaged in any manner.

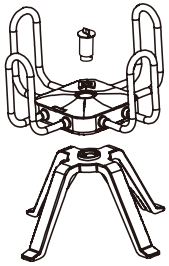

ASSEMBLING AND OPERATION
Upside down the main electric part of the shoe's dryer, connect the feet stand. Put the clip into the hole. Roate the clip to connect the main part and feet stand

TECHNICAL SPECIFICATIONS

Parameter	Value
Heater type	electric
Quantity of heated sections	4
Temperature control	40 - 50 °C
Maximum power	30 W
Connection plug	CEE 7/7
Power cable length	1.4 m
Product material	Aluminum, plastic
Protection	IPX22
Power supply	230/50 V/Hz
Product dimensions	330 × 330 × 320 mm
Color	white
Weight	0.8 kg

Notes:
- *Technical specifications given in this table are supplemental information and cannot give occasion to claims.*
- *Technical specifications and package contents are subject to change without notice due to the improvement of REAL-EL production.*

Manufacturer: ENEL GROUP OÜ, Harju maakond, Rae vald, Jüri alevik, Aruküla tee 55a, 75301, Estonia.
® Registered Trademark of ENEL GROUP OÜ. Estonia.